


Ultra Recliner Assembly Instructions


Step 1

Arrange wood parts as shown in Fig. 1. Do NOT remove plastic wrap from stretcher assembly.

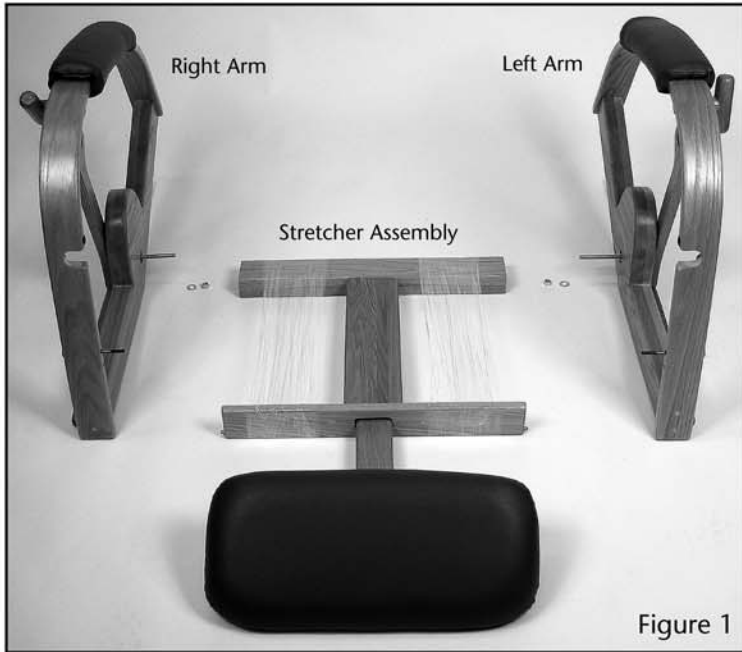


Step 2

Screw threaded rods into metal inserts on both arms. Hand tighten until they bottom out (Figs. 1 and 2).

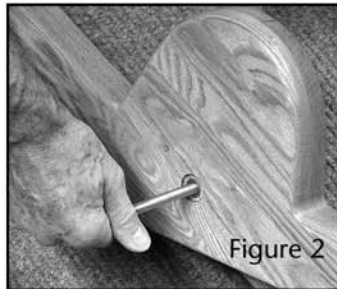


Step 3

Lay right arm assembly on padded floor. Put stretcher assembly into position as shown in Fig. 3. End hole in rear stretcher will engage threaded rod, and metal pin on front stretcher will fit into lower hole in front.

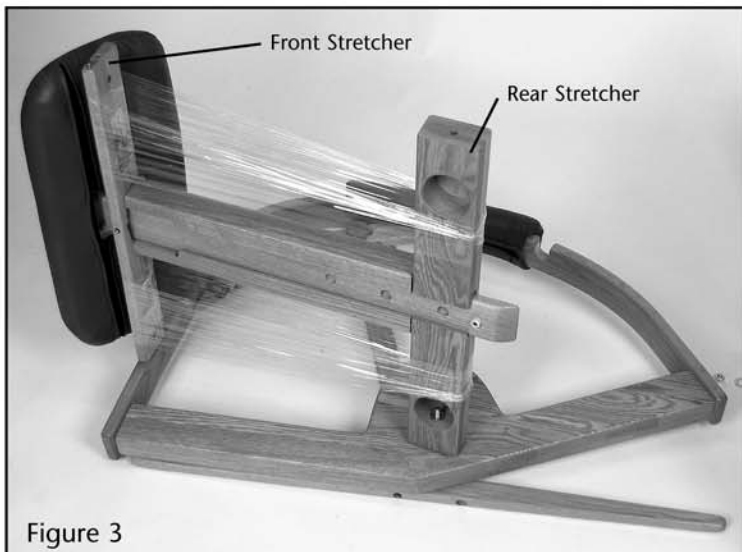


Step 4

Place washer and nut over end of threaded rod. Tighten securely with wrench (washer should bend into shape of recess hole).

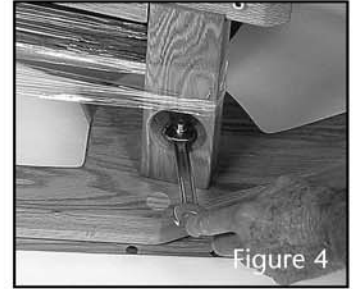


Step 5

Turn arm upright and fasten front stretcher bolt using hex wrench (stored on back of front stretcher).

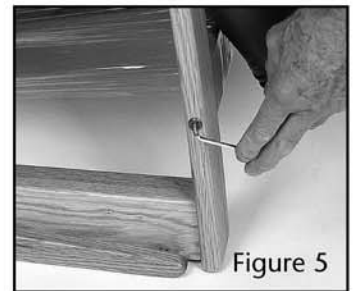

Step 6

Place left arm on padded floor. Fit seat into front and rear grooves on arm. Zipper underneath seat cover will align with front groove. Seat should also rest against support at bottom of arm.

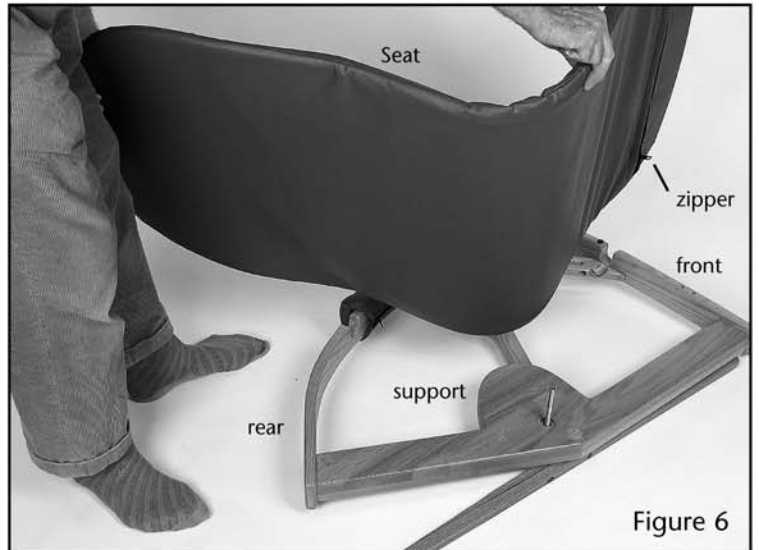

Step 7

Lift right arm assembly and *carefully* engage threaded rod, front pin and arm grooves.

(over)

Ultra Recliner Assembly Instructions

Step 8

Place washer and nut over end of threaded rod. Tighten securely with wrench (washer should bend into shape of recess hole).



Figure 8

Step 9

Turn chair upright and fasten front stretcher bolt using hex wrench. It may help to bend top of arm slightly inwards when tightening.

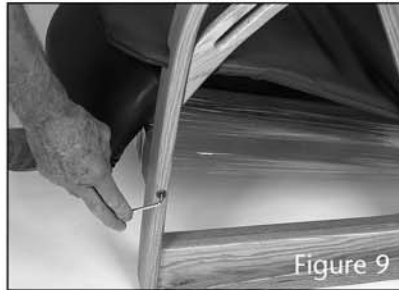


Figure 9

Step 10

Cut and discard plastic wrap from stretcher assembly.



Figure 10

Step 11

Place seat cushion on seat. Before removing tag, make sure that tagged end of cushion is at back. Place head cushion over top of cushion, with dowel acting as counterweight behind.

Note: Some head cushions come with an extra strap that is placed between seat cushion and seat to prevent head cushion from slipping.



Figure 11

How to operate your Ultra Recliner

Adjustable LumBar Support

To adjust the LumBar Support, move the seat cushion forward and open the access zipper. Grab the LumBar firmly with one hand and push up or pull down to suit your needs. The LumBar should not move too easily! Tip: Move it in a zig-zag motion, alternately pushing or pulling from left and right.

Twist-Lock Mechanisms

Our Twist-Locks enable you to lock into your favorite angle of recline with a simple twist on both sides. Follow these steps for safe operation:

1. Before you sit down, make sure both Twist-Locks are in the Unlocked position (Figure 12) and that the seat is upright.
 2. Sit down. Pull out footrest to desired stop.
 3. To recline, grab lever handles and push away forcefully. You can also push off the ground with your feet.
 4. When you have reached your desired angle, rotate the Twist-Locks to Locked position (Figure 13).
 5. To change positions, return Twist-Locks to Unlocked position.
- Note: Twist-Locks lock and unlock in both clockwise and counter-clockwise directions. There is no harm to turning them around and around.



Figure 12: Unlocked Position



Figure 13: Locked Position

Adjustment of Twist-Lock Mechanisms

Use the black hex wrench that came with your recliner.

If a Twist-Lock is too loose, restrain the outer handle (in locked position) with one hand and turn the inner hex screw clockwise a very small amount. Test tightness by unlocking and locking. Note: a lock-nut makes the screw hard to turn.

If a Twist-Lock is too tight, restrain the outer handle (in locked position) with one hand and turn the inner hex screw counter-clockwise a very small amount. Test tightness by unlocking and locking.

