

## Frame Assembly

### STEP 1

- Arrange frame parts as shown at right.



### STEP 2

- Connect upper and lower parts. Push together.




### STEP 3

- Hold frame with seat end at floor. Push LumBar down to within 6 inches of large bend. It is easiest to move by alternately pushing each side a little at a time.



### STEP 4

- Pull frame cover over frame as shown. Be careful to keep the inner seam toward the back.

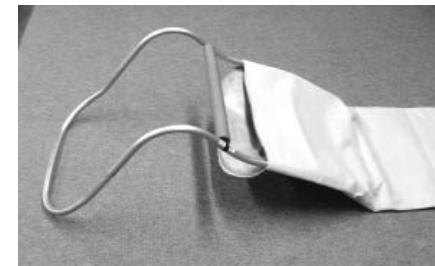

### STEP 5

- Pull frame cover end flap over frame, and close the zipper. This is easiest if you start at one end and roll flap over toward the other end.



You are done! Continue with Chair/Rocker Assembly Instructions.



Toll-free (800) 451-7247  
Workshop (978) 281-5276  
contact@kleindesign.com

Klein Design, Inc.  
99 Sadler Street  
Gloucester, MA 01930

