


MODSEAT ASSEMBLY INSTRUCTIONS

Step 1

Arrange side pieces (A), front stretcher (B), rear stretchers (C), and connector tubes (D) as shown.

Note: For ModLoveseat and ModSofa, see section at lower right.

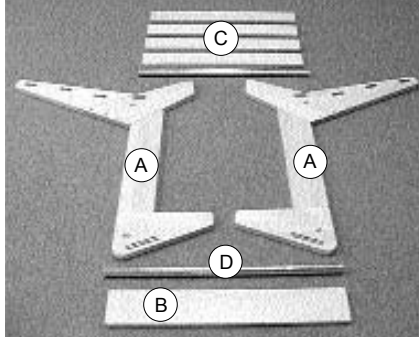


Step 2

Twist steel tubes into front and rear holes of one side piece. Plastic liners inside holes should hold tubes snugly in place.




Step 3

Invert and press tubes into holes on other side piece. Place assembly upright.

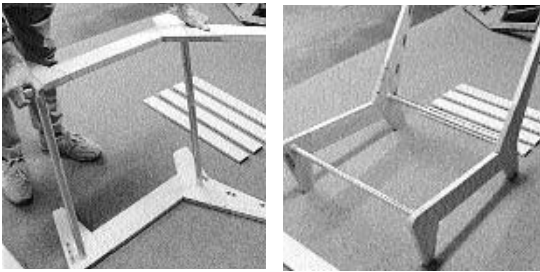

Step 4

Press front stretcher and lowest rear stretcher into their respective connectors.

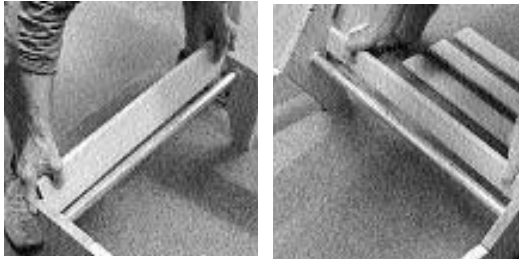


Step 5

Pull canvas seat support (sling) around steel tubes. Close zipper. Move the zipper to the underside by pulling sling around tubes.




Step 6

Place seat cushion as shown on sling. Push zippered end of front flap through opening between front stretcher and sling.

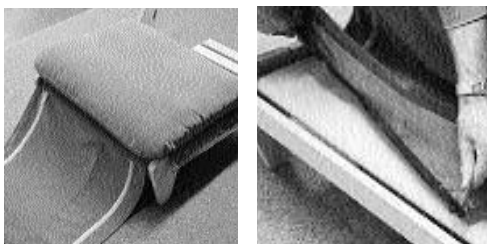

Step 7

Pull flap around bottom and up through the gap in the rear. (It helps to turn chair on its side.) Close zipper.

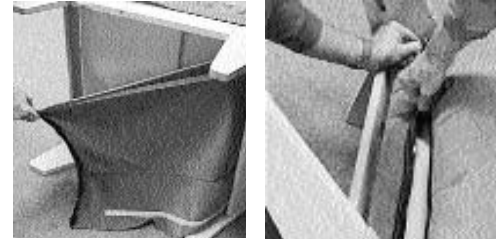

Step 8

Push side flaps through openings and attach velcro closure strips.




Step 9

Place the back cushion with the loops facing down and to the rear. Zip the seat and back cushions together. (Caution: the metal slide connectors have sharp edges. Be careful with fingers and fabric.)




Step 10

Push back cushion forward. Press middle two rear stretchers into connectors. Place one back support dowel into bottom notch, and the other into middle or top notch (to suit your lumbar needs).

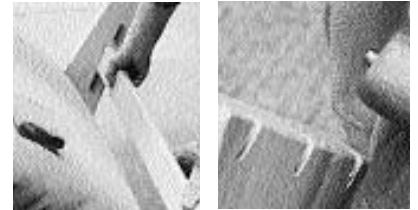


Step 11

Slide the last rear stretcher through loops. Engage stretcher to top connectors. Finally, insert retainer pins in holes above top stretcher.

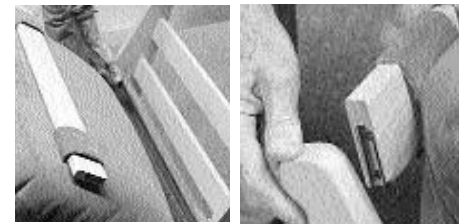

MODLOVESEATS AND MODSOFAS

For ModLoveseats and ModSofas, repeat Steps 3 thru 11 for each component. Make sure that you follow proper sequence, with STRAIGHT sides on the outsides and NOTCHED sides on the inside.

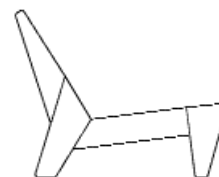

STRAIGHT(outsides)



NOTCHED (inside)