



**STEP 1**

- Arrange frame side pieces (A), LumBar tube (B), frame connectors (C), and tension strap (D) as shown.

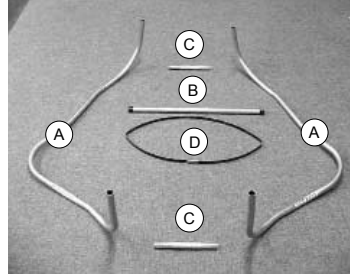

**STEP 2**

- Insert frame connectors into frame openings and push together.

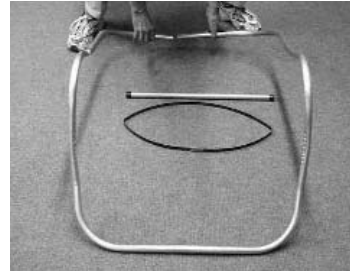

**STEP 3**

- Position frame with seat end on the ground. (Seat end has frame joints). Push tension strap over back end of frame



**STEP 4**

- Move strap down to about 6 inches from floor. This is done more easily by sliding one side at a time. An alternative method is to place the frame on its side and slide the strap while pressing down on the frame.



**STEP 5**

- Place LumBar tube inside tension strap. Wind duct tape around to fasten tube to straps.



**STEP 6**

- Place foam cylinder around LumBar. Tape over seam with duct tape.



**STEP 7**

- Place frame on ground as shown. With zipper facing up, pull frame cover over frame. *Note: Be careful that the inner seam lays untwisted along the frame for a smooth appearance.*



**STEP 8**

- You may find this position easier to finish pulling over the frame cover.



**STEP 9**

- Finally, pull the flap around the end of the frame and close zipper. *Again be sure that inner seam lays untwisted along frame for a smooth appearance.*



**STEP 10**

Move on to Chair/Rocker Assembly Instructions

Toll-free (800) 451-7247  
 Workshop (978) 281-5276  
 Email [contact@kleindesign.com](mailto:contact@kleindesign.com)

Klein Design, Inc.  
 99 Sadler Street  
 Gloucester, MA 01930

